



# User manual Vodafone Smart Chat

**vodafone**

## **LEGAL INFORMATION**

**Copyright © 2012 ZTE CORPORATION.**

**All rights reserved.**

Your Vodafone Smart Chat is made exclusively for Vodafone by ZTE CORPORATION.

No part of this manual reproduced or transmitted in any form or by any means without prior written consent of ZTE CORPORATION.

### **Trademarks**

Vodafone and the Vodafone logos are trademarks of the Vodafone Group. Google, Android and its logos are trademarks of Google, Inc. All other products or service names are the property of their respective owners.

### **Notice**

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Please read the Product Safety Information carefully to ensure the correct and safe use of your Vodafone Smart Chat.

**ZTE CORPORATION Address:**

ZTE Deutschland GmbH, Am Seestern 18, 40547 Düsseldorf,  
Germany

ZTE Corporation, NO. 55, Hi-tech Road South, Shenzhen, P.R.China

Postal Code: 518057

Website: <http://www.zte.com.cn>

**Version No.:** R1.0

**Edition Time :** 20120820

## **Contents**

<b>Safety Precautions .....</b>	<b>11</b>
Pictograms and Graphic Symbols .....	11
RF Exposure .....	12
General Statement on RF Energy .....	12
Specific Absorption Rate (SAR) .....	12
Body-worn Operation.....	13
Limiting Exposure to Radio Frequency (RF) Fields.....	14
Regulatory Information.....	14
<b>Getting Started.....</b>	<b>15</b>
Overview .....	15
What the keys do .....	16
Starting up.....	17
How to install your SIM/memory card .....	17
How to insert the battery.....	18
How to charge your mobile phone .....	18
Powering your phone on/off .....	19
How to power on your phone .....	19
How to power off your phone .....	20
How to switch your phone to sleep mode .....	20
How to wake up your phone from sleep mode .....	20
How to use your phone .....	21
Using touch .....	21
Home Screen .....	22
Phone Status and Notifications .....	25

Applications and Settings preview .....	27
<b>Phone calls .....</b>	<b>32</b>
Making a call.....	32
Making a call from Dialer .....	32
Making a call from Contacts.....	32
Making a call from Call History .....	32
Making a call from a Text Message .....	33
Making a conference call.....	33
Making an Emergency call.....	34
Making an International call.....	34
Receiving a call .....	35
Answering an Incoming call.....	35
Rejecting an Incoming call .....	35
Muting a call.....	35
Putting a call on Hold .....	36
Turning the speaker on/off.....	36
Ending a call.....	36
Call settings.....	36
<b>Contacts .....</b>	<b>38</b>
Starting to use Contacts .....	38
Contacts screen.....	38
Managing Contacts .....	39
Importing/Exporting Contacts .....	39
Creating a contact.....	40
Adding a contact to Favorites.....	40

Searching for a contact .....	41
Editing a contact .....	41
Deleting a contact.....	41
<b>Entering text.....</b>	<b>42</b>
<b>Using the hardware keyboard.....</b>	<b>42</b>
Hardware keyboard input settings.....	43
Using the onscreen keyboard .....	44
Onscreen keyboard input settings.....	45
<b>Messages.....</b>	<b>46</b>
Exchanging messages .....	46
How to compose an SMS.....	46
How to compose an MMS .....	47
Managing messages and messages threads .....	48
Message settings .....	49
Using Email .....	50
How to create an Email account .....	51
How to compose and send an Email.....	53
How to reply to or forward an Email .....	53
Email settings.....	54
<b>Getting connected.....</b>	<b>56</b>
Connecting to the internet.....	56
Ways of connecting to the internet .....	56
GPRS/3G/EDGE .....	56
Wi-Fi.....	57
Using browser .....	59

How to open browser.....	59
How to open web pages .....	59
Browsing options .....	59
Using bookmarks .....	61
Browser settings .....	62
Bluetooth.....	65
How to turn on/off bluetooth .....	65
How to make your device visible.....	65
How to change your device name.....	66
How to pair with another bluetooth device.....	66
<b>Experiencing multimedia.....</b>	<b>67</b>
<b>Camera .....</b>	<b>67</b>
How to open Camera .....	67
How to take pictures.....	67
Camera settings.....	68
<b>Camcorder .....</b>	<b>69</b>
How to open Camcorder .....	69
How to shoot videos .....	69
Video settings.....	69
<b>FM Radio .....</b>	<b>70</b>
How to open FM Radio .....	70
How to listen to FM Radio .....	71
<b>Music .....</b>	<b>72</b>
How to open Music .....	72
How to play Music .....	72
How to create playlists.....	73

Managing Your playlists .....	74
How to set a song as Ringtone .....	74
Videos.....	74
How to open Videos .....	75
How to play Videos.....	75
Gallery .....	75
Sound Recorder .....	77
How to open Sound Recorder .....	77
How to record your memos .....	77
<b>Google applications.....</b>	<b>78</b>
Signing In to your google account.....	78
Using Google Calendar.....	78
Using Google Mail.....	78
How to open Google Mail .....	79
How to create and send an email.....	79
Using Google Talk.....	79
How to open Google Talk .....	79
How to add a new friend .....	79
How to view and accept an invitation .....	80
How to change your online status .....	80
How to start a chat .....	80
<b>Phone settings .....</b>	<b>81</b>
Basic settings .....	81
How to set the time and date .....	81
Display settings .....	81

Sound settings .....	82
Language settings.....	84
Mobile network services.....	85
Security settings.....	86
Protecting your phone with a screen lock .....	86
Protecting your SIM card with a PIN .....	88
Setting up credential storage.....	88
Managing memory .....	89
Managing your memory card .....	89
Managing internal phone storage .....	90
How to reset to factory settings.....	91
How to reduce power consumption .....	91
Application settings .....	93
Managing applications .....	93
<b>Other applications.....</b>	<b>95</b>
Alarm.....	95
How to set alarms .....	95
Calculator.....	95
Note pad .....	95
SIM Toolkit .....	96
Task Manager.....	96
Google+ service .....	96
The open source code service .....	97
<b>For Your Safety.....</b>	<b>99</b>
Distraction.....	99

Driving.....	99
Operating Machinery .....	99
Product Handling .....	99
General Statement on Handling and Use .....	99
Small Children .....	100
Demagnetization .....	101
Electrostatic Discharge (ESD).....	101
Power Supply .....	101
Antenna .....	101
Normal Use Position.....	101
Air Bags .....	102
Seizures/ Blackouts .....	102
Repetitive Motion Injuries.....	102
Emergency Calls .....	103
Loud Noise.....	103
MP3 and Video Player Function .....	103
Bright Light .....	103
Phone Heating.....	104
Phone Acoustic.....	104
Electrical Safety .....	104
Accessories.....	104
Connection to a Car .....	104
Faulty and Damaged Products .....	104
Battery Handling & Safety .....	105
Interference.....	105
Pacemakers .....	105

Hearing Aids .....	106
Medical Devices .....	106
Hospitals .....	106
Aircraft .....	106
Interference in Cars .....	107
Explosive Environments.....	107
Petrol Stations and Explosive Atmospheres.....	107
Blasting Caps and Areas .....	107
<b>Declaration of RoHS Compliance.....</b>	<b>108</b>
<b>Disposal of Your Old Appliance .....</b>	<b>109</b>
<b>EC DECLARATION OF CONFORMITY .....</b>	<b>110</b>

# Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your mobile phone. For detailed information, refer to the section "For Your Safety" on page 99.

## Pictograms and Graphic Symbols

	Read the Safety Information section of this user manual on page 99		Do not use while re-fuelling
	Do not use hand-held while driving		This device may produce a bright or flashing light
	For body-worn operation maintain a separation of 1.5 cm		Do not dispose of it in a fire
	Small parts may cause a choking hazard		Avoid contact with magnetic media
	This device may produce a loud sound		Avoid Extreme Temperatures
	Keep away from pacemakers and		Avoid any contact with liquid, keep it dry

	other personal medical devices		
	Switch off when instructed in hospitals and medical facilities		Do not attempt to disassemble
	Switch off when instructed in aircrafts and airports		Do not rely on this device for emergency communications
	Switch off in explosive environments		Only use approved accessories

## RF Exposure

### General Statement on RF Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

### Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the

independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.523 W/kg\*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide\*\*.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

\*The tests are carried out in accordance with [CENELEC EN50360] [IEC standard PT62209-1].

\*\* Please see [page 13](#) about body worn operation.

## **Body-worn Operation**

Important safety information regarding radiofrequency radiation (RF) exposure

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5cm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

## **Limiting Exposure to Radio Frequency (RF) Fields**

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.


## **Regulatory Information**

The following approvals and notices apply in specific regions as noted.

Please find the section Declaration of RoHS Compliance and CE DOC in the end of this manual.

# Getting Started

## Overview

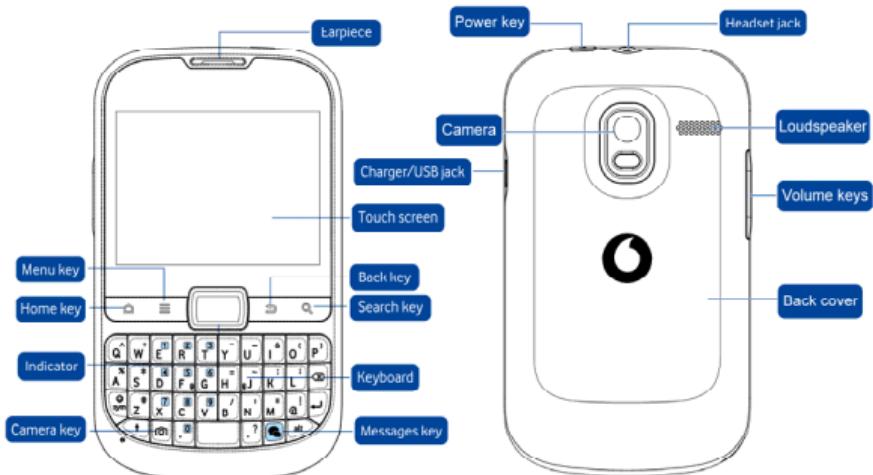

**Note:** The pictures and icons presented in this manual are meant for illustrative purposes only and may not accurately represent the actual pictures and icons found on the phone. Your phone contains the most up to date information.

## What the keys do

Key	Function
Power key	<ul style="list-style-type: none"><li>• Airplane mode or Power off your phone.</li><li>• Hold to get the phone options. You can select Silent mode, Vibration mode, Airplane mode or to power off your phone.</li><li>• Press to switch your phone to sleep mode.</li><li>• Press to wake up your phone.</li></ul>
Home key	<ul style="list-style-type: none"><li>• Press to return to Home Screen from any application or screen.</li><li>• Hold to see the recently used applications.</li></ul>
Menu key	Press to get the options on the current screen.
Back key	Press to go to the previous screen.
Volume keys	<ul style="list-style-type: none"><li>• Press <b>Volume up key</b> to turn the volume up.</li><li>• Press <b>Volume down key</b> to turn the volume down.</li></ul>

## Starting up


### How to install your SIM/memory card

Power off your phone before installing or replacing the battery, SIM card and memory card.


1. Remove the battery cover.



2. Remove the battery.

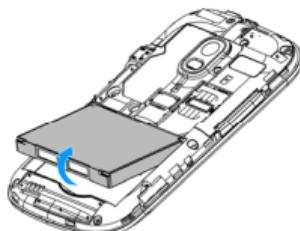

3. Hold your SIM card and memory card with the cut corner oriented as shown below and then insert it into the card holder properly.

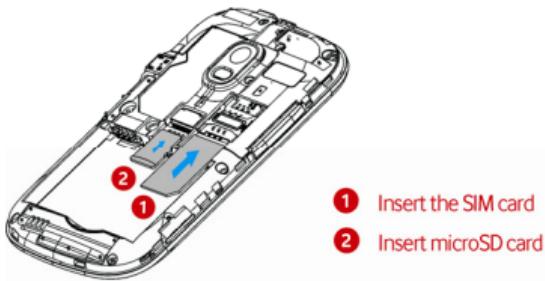


### Notes:

The microSD logo  is a trademark of SD Card Association.

## How to insert the battery

1. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment on the phone.

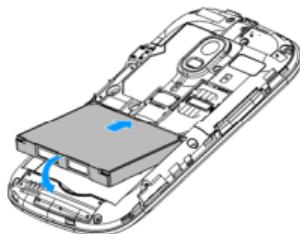

2. Push down the battery until it clicks into place.

## How to charge your mobile phone

The new battery is not fully charged. To charge the battery, you need to:

1. Connect the adapter to your phone via the connector.



2. Connect the adapter to the charger jack.
3. Connect the charger to a standard AC wall outlet.

**Notes:**

- If the battery is low, there will be a pop-up message on the screen.
  - If the battery is charged, the icon  will appear on the notification bar. When charging is completed, the battery indicator  appears on the notification bar.
4. Disconnect the charger when the battery is fully charged.

## Powering your phone on/off

### How to power on your phone

1. Make sure that your SIM card is in your device and the battery is charged.
2. Hold the **Power key** to power on your phone.

## **How to power off your phone**

1. Hold the **Power key** to get the phone options.
2. Select **Power off**, and then touch **OK**.

## **How to switch your phone to sleep mode**

Press the **Power key**.

Sleep mode puts your phone in a low power consumption state while the display is off to save battery power. Your device also goes into sleep mode automatically when you leave it idle after a certain period of time.

### **Tips:**

While the device is in sleep mode, it is able to receive incoming calls, emails and messages.

## **How to wake up your phone from sleep mode**

If your phone is switched to sleep mode, you need to wake it up:

1. Press the **Power key** to activate your screen display.
2. Drag the lock icon down to unlock.



### Notes:

If you have set an unlock pattern for your phone (see *Phone Settings-Security settings-Protecting your phone with a screen lock-To set the screen unlock pattern* on page 86), you need to draw the pattern to unlock your screen.

## How to use your phone

### Using touch

You can use touch gestures with your fingers to control your phone. The controls on your touch screen change dynamically depending on the tasks you are performing.

1. Touch the buttons, icons, or applications to select items or to open applications.
2. Touch and hold some items to see available options.

3. Scroll up/down by sliding your finger up or down the screen.  
From the Home screen you can also slide left/right to browse the extended Home Screen.
4. Drag an item to move it, or do other operations with it.
5. When viewing photos, web pages or maps, you can zoom in and out. You can double-touch to zoom in, then double-touch again to zoom out. You can also pinch your fingers together or expand them to zoom in or out.

## Home Screen

You can add or remove home items in your Home Screen.




Notifications bar	Displays the reminders and status icons of your phone. Flick down to open the notifications panel
Vodafone weather and time	Include easy access of location weather and time.

Shortcuts	Touch these shortcuts to start related applications.
Right side bar	Include the Browser, Apps menu and Dialer.

## How to extend the Home Screen

Beyond the screen width, the Home Screen extends to provide more space for adding items. Slide your finger to the left or right to get the extended Home Screen.

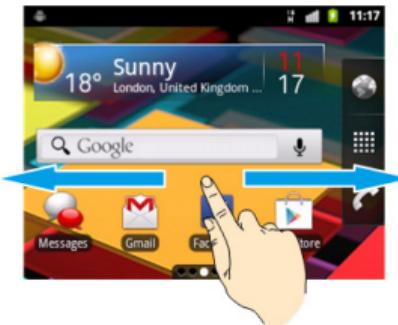

## Customise the Home Screen Wallpaper

### To change the wallpaper

1. Press **Home Key** to return to Home Screen if needed.
2. Press **Menu Key** and select **Wallpaper**.
3. Select the wallpaper you want to use from **Gallery**, **Live wallpapers**, or **Wallpapers**.
4. Touch **Save** or **Set wallpaper**.

## To add a Home Screen item


1. Press **Home Key** to return to Home Screen.
2. Slide your finger to the left or right to get the extended Home Screen if needed.
3. Press **Menu Key** and select **Add**.

You can also touch and hold the blank area of the Home Screen to get the **Add to Home screen** shortcut menu.

4. Select the category and the item you want.

## To remove a Home Screen item

1. Press **Home Key** to return to Home Screen.
2. Slide your finger to the left or right to get the extended Home Screen if needed.
3. Hold the item you want to delete until the  icon appears on the screen.
4. Drag the item to .

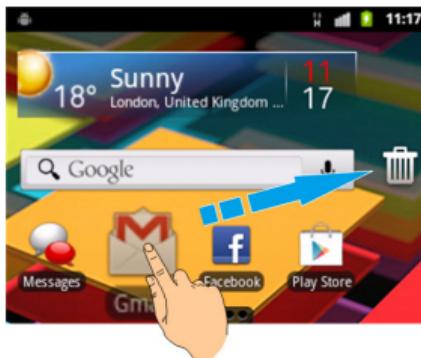

# Phone Status and Notifications

## Phone Status

	GPRS connected		Signal strength
	GPRS in use		No signal
	EDGE connected		Vibrate mode
	EDGE in use		Phone microphone is mute
	3G connected		No SIM card installed
	3G in use		GPS is on
	Battery is very low		Bluetooth is on
	Battery is low		USB is connected
	Battery is full		Speaker is on
	Battery charging		Alarm is set
	Airplane mode		Wired microphone headset

### Tips:

Signing in to your Google Account enables the signal strength icon and data connection icon to green (, , , ) on your phone.

## Notifications

	New Mail		New instant message
	New SMS/MMS		Upcoming event
	New Gmail message		Song is playing
	Missed call		Downloading data
	Call in progress		Portable Wi-Fi hotspot on
	Call on hold		Uploading data
	Error or warning		More (not displayed) notifications

### How to open the notification panel

From the notifications panel, you can get the information of calendar events, new messages, and ongoing settings such as call forwarding or the current call status. You can open the message, reminder, event notification etc. from the Notification Panel.

1. Hold the notification bar until appears on the top of the Screen.
2. Drag downwards.

### Tips:

You can also open the notification panel from the Launcher Home Screen by pressing **Menu Key > More > Notifications**.

# **Applications and Settings preview**

## **Programs preview**

Your Vodafone Smart Chat has lots of functions. Touch  to get the following programs that are pre-installed on your device.

<b>Applications</b>	<b>Description</b>
<b>Alarm</b>	Enables you to set alarms.
<b>Browser</b>	Enables you to browse the internet.
<b>Calculator</b>	Enables you to perform basic calculations such as addition, subtraction, multiplication, division.
<b>Calendar</b>	Enables you to schedule appointments, including meetings and other events.
<b>Camera</b>	Enables you to enter the camera screen directly and use the camera features.
<b>Contacts</b>	Enables you to manage the information of your contacts.
<b>Dialer</b>	Enables you to dial a number to call.
<b>Email</b>	Enables you to enter the Email screen, where you can setup Email, send or receive Emails.
<b>FM-Radio</b>	Enables you to search for radio channels, listen to them, and save them on your device.
<b>Gallery</b>	Enables you to organize and manage your multimedia files.

<b>Applications</b>	<b>Description</b>
<b>Gmail</b>	Enables you to access your Gmail account and check your email on your mobile phone.
<b>Maps</b>	Enables you to track your current location, view real-time traffic situations, and receive detailed directions to your destination.
<b>Messages</b>	Enables you to enter the Messages screen, where you can send and receive SMS and MMS messages.
<b>MGolf Park 99 Trial</b>	Play the game on your phone.
<b>Music</b>	Enables you to browse your audio files and listen to them in the Music player.
<b>Music Shop</b>	Have your music with you, wherever you are.
<b>My Web</b>	Lets you create your personal web page, with all the news, information and features you want.
<b>Settings</b>	Enables you to adjust the device settings.
<b>SIM Toolkit</b>	Appears on the screen only if your SIM card provides this function. Please contact your service provider for detailed information.
<b>Sound Recorder</b>	Enables you to record audio clips.
<b>Talk</b>	Enables you to send and receive instant messages and voice over internet protocol (VOIP), offered by Google Inc.

<b>Applications</b>	<b>Description</b>
<b>Task Manager</b>	Enables you to view and manage all the running programs on your device.
<b>Videos</b>	Enables you to browse your video files and watch them in the Video player.
<b>YouTube</b>	Enables you to view videos that have been uploaded by YouTube members.

### **Settings preview**

You can adjust the device settings. Press **Home Key** >  > **Settings** to view all the settings on your device.

#### **Tips:**

You can also press **Menu Key** > **Settings** from the Home Screen.


Wireless & networks	Enables you to configure and manage your phone's wireless connections, such as Wi-Fi, Bluetooth, mobile networks, and Virtual Private Networks. You can also enable the Airplane mode.
Call settings	Enables you to set up fixed dialing numbers, voicemail, DTMF tones, call forwarding, call waiting, and caller ID etc.
Sound	Enables you to set sound settings, such as ringtones, notifications.
Display	Settings such as screen brightness and so on.

Location & security	Enables you to set the screen unlock pattern, enable the SIM card lock, or manage the phone's credential storage. You can also select the sources to use when determining locations from <b>My Location</b> .
Applications	Enables you to manage applications and installation of new programs.
Account & sync	Enables you to manage your account and configure general sync settings.
Privacy	Enables you to configure privacy settings, such as Location, back up Settings, and Personal data.
Storage	Enables you to check the available memory of the external card and the internal phone storage. You can also unmount or format the external card.
Language & keyboard	Enables you to set the locale (operating system language and region) and text input options.
Accessibility	Enables you to manage accessibility options.
Voice input & output	Enables you to configure the voice recognizer settings or text-to-speech settings if you have installed a text-to-speech (voice data) application.
Date & time	Enables you to set the date, time, time zone, and date/time format. If the network supports, you can also enable automatic time update.

About phone	Enables you to view the phone status, battery level, legal information, etc.
-------------	--

## How to open recently used applications

1. Hold **Home Key** from any screen until the following recently used applications interface appears.

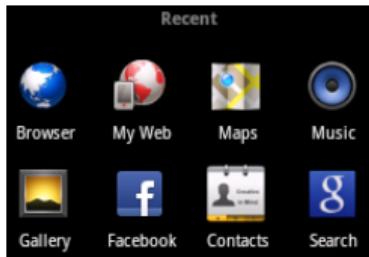

2. Touch an application you want to open.

# Phone calls

## Making a call

### Making a call from Dialer

1. Touch > **Dialer** from Home Screen.
2. Enter the phone number or the contact name you want to call.  
Touch to erase a wrong entry, hold this key to clear all digits. Your phone automatically lists the matching numbers or contacts. You can touch to hide the input box and to see if there are more matching numbers or contacts.
3. Touch **Call**

### Making a call from Contacts

1. Press **Home Key** > > **Contacts**.
2. Slide your finger to scroll the contacts list and touch the contact you want to call.
3. Touch

### Making a call from Call History

1. Press **Home Key** > > **Dialer** to open the Dialer.
2. Touch to open Call History.

**Tips:**

You can also open Call History by touching the **Call log** tab from the Contacts Screen.

3. Touch a recently dialed, received or missed call from the list.  
You can scroll down the list to see more call history.
4. Touch 

## Making a call from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Press **Home Key** >  > **Messages** and touch the message that contains the phone number you want to call.
2. Touch the message content.
3. Select the number and touch 

## Making a conference call

You can create a phone session between yourself and two or more other parties.

### Notes:

This function is subject to your service operator and the network status.

1. Call the first number.
2. While you are connected to the first number, press **Menu Key** > **Add call**.
3. Call the second number.

4. While you are connected to the second number, press **Menu Key > Merge calls.**
5. To add the third party, touch **Add call**.
6. Dial the number, and when connected, touch **Merge calls**.

## **Making an Emergency call**

1. Enter the emergency number for your location from Dialer.
2. Touch  Call

### **Notes:**

In most countries it is possible to dial emergency numbers when the SIM card is not inserted.

Your SIM card may store other emergency numbers. Contact your service operator if you need more information.

## **Making an International call**

### **Notes:**

This function is subject to your service operator and the network status.

1. Enter “+”.
2. Enter the full phone number.

For example: +49-123-12345678 in the following format: + country code-area code-phone number.


3. Touch  Call

## Receiving a call

### Answering an Incoming call

When there is an incoming call, the phone will display the information on the screen.

Slide  to right to answer the call.

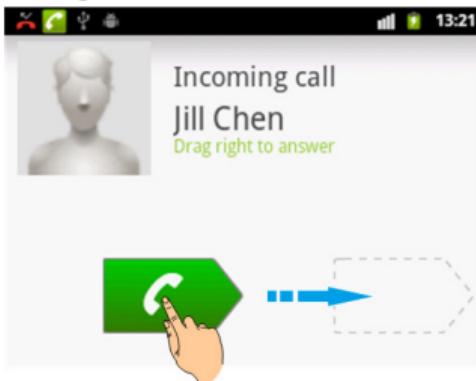

### Rejecting an Incoming call

Slide  to left to reject the call.

### Muting a call

During a call, you can mute your microphone so that the person with whom you are speaking cannot hear you, but you can still hear him or her.

Touch .

When the microphone is turned off, the mute icon  appears on the screen.

## Putting a call on Hold

During a call, you can use the following methods to put the call on hold.

Touch **Hold** on incall screen currently.

The  icon will be displayed if a call is on hold.

If you are already on a call and accepted the new call, the first call will be put on hold automatically. You can choose to switch between the two callers by touching **Swap** on incall screen currently.

## Turning the speaker on/off

Touch  during a call.

The speakerphone icon () appears in the notification bar when the speakerphone is on.

## Ending a call

During a call, you can touch  to end it.

## Call settings

You can adjust the call settings of your phone. To open the call settings menu, press **Menu Key > Settings > Call settings** from the Home Screen.

Fixed Dialing Numbers	Enables you to restrict outgoing calls to a fixed set of numbers. To enable this feature you must know your SIM card's PIN2 code.		
Voicemail service	Enables you to select a voicemail service provider.		
Voicemail settings	Enables you to specify a voicemail number.		
DTMF Tones	Enables you to set the length of DTMF tones.		
GSM/ WCDMA call settings	Call forwarding	Enables you to forward incoming calls to a different number. You can select when to forward: <b>Always forward</b> , <b>Forward when busy</b> , <b>Forward when unanswered</b> , or <b>Forward when unreachable</b> .	
	Additional settings	Caller ID	Enables you to choose whether to display your number in outgoing calls.
		Call waiting	Enables you to choose whether to be notified of new incoming calls while you are already on a call.

# Contacts


## Starting to use Contacts

You can add new contacts along with their information. Setting up communication information for the contact will allow you to call the person quickly or browse the contact's information. Contacts are saved in the phone memory or in the SIM card. If you store the information in the SIM card, you can fill the name and a number. If you store the information in the phone memory, you can also fill out more information including Email, Postal address, pictures, Nickname, website, etc.

Press **Home Key** >  > **Contacts** to enter the Contacts Screen.

## Contacts screen

There are five tabs in the Contacts Screen: **Dialer**, **Call log**, **Contacts**, **Favorites**, and **Groups**.

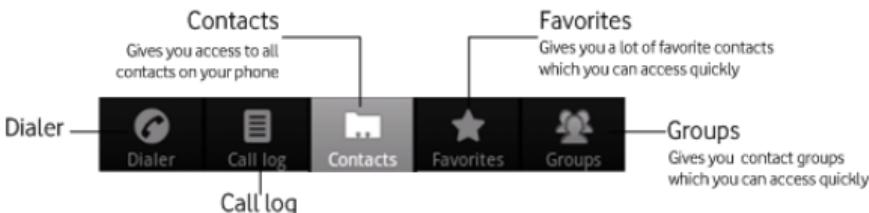

# Managing Contacts

## Importing/Exporting Contacts

You can import/export contacts from/to your SIM card or microSD card.

### To Import/export contacts from/to SIM card

1. Press **Menu Key > Import/Export** from the Contacts Screen.
2. Select to import or export contacts from/to SIM card.  
Your Vodafone Smart Chat will automatically read the contacts.
3. Select the contacts you want to import/export.

#### Tips:

- If you want to import all contacts saved in your SIM card, tip 
  - If you want to export all contacts to your SIM card, tip 
4. Touch  if needed.

### To Import/export contacts from/to memory card

1. Press **Menu Key > Import/Export** from the Contacts Screen.
2. Select to import or export contacts from/to memory card.

If you want to import contacts from memory card, you should have vCard files saved in the memory card. If there is more than one vCard file, you can select to import one vCard file, multiple vCard files or all vCard files.


3. Touch  if needed.

## **Creating a contact**

1. Press **Menu Key > New contact** from the Contacts Screen.
2. Select the location to save your contact.
3. Enter the name and phone numbers. You can also set the Email addresses, Chat addresses, Postal addresses, Organizations, Notes etc. if you select to create a phone contact.
4. Touch **Done** to save the contact.

## **Adding a contact to Favorites**

1. Find the contact you want to add to Favorites from your Contacts Screen.
2. Hold the contact until a shortcut menu appears.

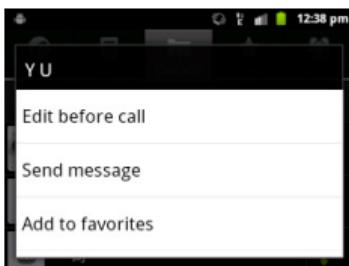

3. Touch **Add to favorites**.

### **Tips:**

You can also select a contact and touch the star next to the contact's name to add the contact to Favorites. Touch the star again to remove the contact from Favorites.

## Searching for a contact

1. Press **Search Key** from the Contacts Screen.
2. Input the contact name you want to search for.  
The contacts matched will be listed.

## Editing a contact

1. Select the contact you want to edit from the Contacts Screen.
2. Touch .

### Tips:

You can also edit a contact by holding it in the Contacts Screen and select **Edit contact** from the pop-up shortcut menu.

3. Edit the contact and touch **Done**.

## Deleting a contact

1. Select the contact you want to delete from the Contacts Screen.
2. Touch .
3. Touch **OK**.

### Tips:

If you need to delete multiple contacts, you can press **Menu Key > Delete contacts** from the Contacts Screen and select the contacts in Phone or SIM card to delete.

# Entering text

## Using the hardware keyboard

Your phone has a hardware keyboard – a compact version of standard computer keyboard.



When entering text, do the following:

- To enter lowercase letters, press the letter keys on the hardware keyboard.
- To enter a single uppercase letter, press and then press the corresponding key.

- To enter all uppercase letters, press twice and then press the letter keys. To change back to all lowercase letters, press again.
- To enter a character, number or symbol (labeled at the upper part of the key), press **alt** then press the corresponding keys. Press **alt** twice to enter all characters, numbers or symbols (labeled at the upper part of the key). And then the same again to go to normal type.
- To open the symbol pad, press . You can touch on the screen to enter a symbol.
- To move the cursor, touch on the screen.
- To delete the character before the cursor, press .
- To start a new line, press .
- To enter a space, press .

**NOTE:** Holding a specific letter key may result in multiple accented character options (like á, ü, é, etc). Touch on the screen to enter the character you need.

## Hardware keyboard input settings

You can choose the text input settings for the hardware keyboard by press **Menu Key** > > **Settings** > **Language & keyboard** > **Build-in keyboard** from the Home Screen.

Tick the check boxes to enable the following options:

- **Auto-replace:** Correct the mistyped words automatically.
- **Auto-cap:** Capitalize the first letter in each sentence automatically.
- **Auto-punctuate:** Press the space key twice to insert “.”


## Using the onscreen keyboard

You can also use the onscreen Android keyboard to enter text. If the keyboard is enabled, it automatically appears on the screen when you enter a field that needs text.

### To enable the onscreen keyboard:

1. Press **Home Key** >  > **Settings** > **Language & keyboard**.
2. Tick the **Android keyboard** check box.
3. Touch **Android keyboard** and tick the **Enable the soft keyboard** check box.

The Android keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape.

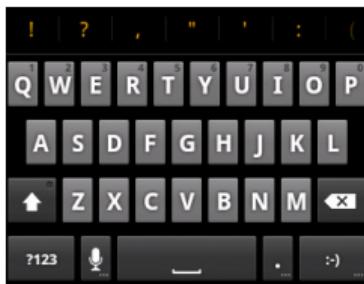

- Touch the alphabetic keys to enter letters. Touch and hold some specific keys to enter associated accented letters or numbers. For example, to enter È, touch and hold and the available accented letters and number 3 appear. Then slide to choose È.
- Touch to use uppercase or lowercase. This key also changes to indicate the current case you are using: for lowercase, for uppercase, and when locked in uppercase.
- Touch to delete the text before the cursor.
- Touch to select numbers and symbols. You can then touch to find more. Also, often used symbols are displayed on top of the keyboard. Flick left or right to find the one you need and touch to enter.
- Touch to enter a smiley face; hold the key and swipe to choose more emoticons.
- Touch to use Google's networked voice input.
- Touch and hold and then select to set up Android keyboard.

## Onscreen keyboard input settings

You can set the options for Android keyboard by press **Menu Key > > Settings > Language & keyboard > Android keyboard** from the Home Screen.

# Messages

**Messages** is where all of your SMS and MMS accounts are located.

To access your message accounts, Press **Home Key** >  > **Messages**.

## Exchanging messages

From **Messages** you can receive and send an SMS or MMS.

When you receive a new message, you can open it from the Notification Panel, or from Messages Screen. Simply touch on the new message to read it.

The device will alert you for the unread message(s) with the icon 

## How to compose an SMS

1. Press **Home Key** >  > **Messages**.
2. Touch **New message**.
3. Touch **To** field and enter the recipient's number. You can also enter the first letters of the recipient's name to display a list of matching names stored in **Contacts**, and then select a recipient from the list.
4. Touch **Compose message** field and enter the content of your SMS.
5. Touch **Send** to send your SMS.

## How to compose an MMS

1. Press **Home Key** >  > **Messages**.
2. Touch **New message**.
3. Touch **To** field and enter the recipient's number. You can also enter the first letters of the recipient's name to display a list of matching names stored in **Contacts**, and then select a recipient from the list.
4. Press **Menu Key** > **Add subject** to enter the subject of your MMS.
5. Touch **Compose message** field and enter the contents of your MMS.
6. Touch  to add an attachment to your MMS:

**Pictures:** Select a picture to add to your MMS.

**Capture picture:** Take a photo and add to your MMS.

**Videos:** Select a video clip to add to your MMS.

**Capture video:** Shoot a video clip and add to your MMS.

**Audio:** Select an audio file to add to your MMS.

**Record audio:** Record an audio file and add to your MMS.

**Slideshow:** Edit a slide show and add to your MMS.

7. Touch  to add an expression to your MMS

8. Touch **Send** to send your MMS.

### Tips:

- If you add a subject or an attachment to your SMS, the SMS will be converted to an MMS automatically.

- If you remove the subject and attachment of your MMS, the MMS will be converted to an SMS automatically.

## Managing messages and messages threads

SMS and MMS messages which are sent to and received from a contact (or a number) are grouped into message threads in Messages Screen. Threaded messages show your exchanged messages (similar to a chat program) with a specific contact on the screen. Message threads are sorted by the time when you received them, with the latest one on the top.

### To reply to a message

1. Touch the message you want to reply to from Messages Screen.
2. Touch **Compose message** and enter the contents of your message.
3. Touch **Send**.

### To delete a message (thread)

1. Press **Menu Key > Delete threads** from the Messages Screen.
2. Select the messages or threads you want to delete.
3. Touch **OK**.

### Notes:

You can also delete a message or thread by opening it from Messages Screen and pressing **Menu Key > Delete**.

## **Message settings**

Press **Menu Key > Settings** from the Messages Screen. You can configure your message settings.

### **Storage settings**

- **Delete old messages:** Select to delete old messages as limits are reached.
- **Text message limit:** Set the maximum number of text messages allowed in a single thread.
- **Multimedia message limit:** Set the maximum number of multimedia messages allowed in a single thread.

### **Text message (SMS) settings**

- **Delivery reports:** Request a delivery report for each SMS message you send.
- **Manage SIM card messages:** Manage the messages saved in your SIM card.
- **SMS validity:** Set the validity time for SMS messages.
- **SMS priority:** Set the order priority for SMS messages.
- **Service Center:** Enables you to view and edit the service center number.

### **Multimedia message (MMS) settings**

- **Delivery reports:** Request a delivery report for each MMS message you send.
- **Read reports:** Request a read report for each MMS message you send.

- **Auto-retrieve:** Select to retrieve MMS messages automatically.
- **Roaming auto-retrieve:** Select to retrieve MMS messages automatically when you are roaming.
- **MMS validity:** Set the validity time for MMS messages.
- **MMS creation mode:** Set the creation mode for MMS messages.

### Notifications settings

- **Notifications:** Select to display message notifications in the notification bar.
- **Group Msg Notifications:** Select to display group message notifications in status bar.
- **Select ringtone:** Select a ringtone for your incoming messages.
- **Vibrate:** Select to make your phone vibrate when receiving a new message.

### Signature settings

- **Edit signature:** Enables you to view and edit the signature for outgoing messages.
- **Add signature:** Select to add signature to all outgoing messages.


## Using Email

Press **Home Key** >  > **Email**. You can enter the Email Screen to setup your email account and exchange emails.

If there is a pre-stored email account in your phone, you may use the default account to send and receive emails directly.

## How to create an Email account

1. If there is a pre-stored email account in your phone, you may touch the email address name or press **Menu Key > More > Accounts** from the Email Screen, and then press **Menu Key > Add account**.
2. Enter your Email address and password, and then touch **Next** when you enter the Email Screen for the first time.

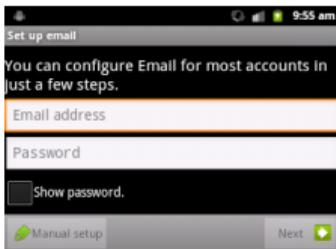

3. Select the type of your account, edit the incoming server settings, and then touch **Next**.




If you touch **Next[Check]**, your phone will check the incoming server settings and finish the setup automatically. If you are notified that setup could not be finished, you might need to correct some settings to finish it. If there is any problem, please contact your mobile service provider and Email service provider.

4. Edit the outgoing server settings and touch **Next**.

If you touch **Next[Check]**, your phone will check the outgoing server settings and finish the setup automatically.

5. Set the Email checking frequency, select whether to use this account by default or be notified when email arrives, and then touch **Next**.
6. Set the Email download options and number of messages per download, select whether to synchronise deleted message with server or not.
7. Give your account a name and set a name displayed on outgoing message, and then touch **Done**.

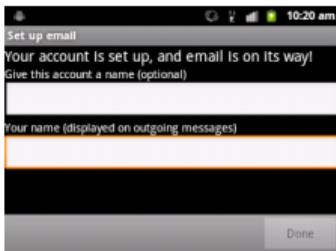

## **How to compose and send an Email**

After creating an email account, you can compose and send email messages.

1. Press **Menu Key > Compose** from the Email Screen.
2. Touch **To** field and enter your recipient's address.

When you enter the address, the matching addresses saved in your Contacts will be displayed. You can touch the recipient from the list.

### **Tips:**

You can also press **Menu Key > Add Cc/Bcc** to add recipients.

3. Enter the subject and the content of your email.
4. Touch **Send**.

## **How to reply to or forward an Email**

1. Open the email you want to reply to or forward from Email Screen.
2. Press **Menu Key > Reply/ Forward** to reply to/forward the email.

You can also press **Menu Key > Reply all** to reply to all recipients of the email.

3. Enter the contents/recipients of your email.
4. Touch **Send**.

## Email settings

Touch the account you want to set from the Email Screen and press **Menu Key > More > Account settings**. You can get the email settings.

### General settings

- **Account name:** Set your account name.
- **Your name:** Set the name displayed on outgoing message.
- **Email address:** Set the email address.
- **Use signature:** Select to use signature for emails.
- **Signature:** Edit the signature for emails.
- **Use reply to:** Select to use reply to email address.
- **Reply to:** Edit reply to email address. Format: abc<abc@def.com> or abc@def.com.
- **Email check frequency:** Set the email checking frequency.
- **Power-saving mode:** Enable the email synchronization time intelligent adjustment.
- **Default account:** Select the check box to send email from this account by default.

### Download settings

- **Download settings:** Set the Email download options and number of messages per download, select whether to synchronise deleted message with server or not.

- Sync deleted message: Select to be synchronise deleted message with server.

### **Notification settings**

- **Email notifications:** Select to be notified in notification bar when email arrives.
- **Select ringtone:** Select the ringtone for incoming email notification.
- **Vibrate:** Select to be notified by vibration with ringtones when email arrives.

### **Server settings**

- **Incoming settings:** Set the incoming server settings.
- **Outgoing settings:** Set the outgoing server settings.

# Getting connected

## Connecting to the internet

Your phone's networking capabilities allow you to access the Internet or your corporate network.

### **Ways of connecting to the internet**

You can use the default connection settings to connect to the Internet through your mobile network (GPRS/3G/EDGE), or Wi-Fi.

#### **GPRS/3G/EDGE**

Use **GPRS/3G/EDGE** to connect to the Internet and to send and receive MMS/Email messages on your phone. You will need a data plan to use your wireless service provider's GPRS/3G/EDGE network. Check with your wireless service provider for GPRS/3G/EDGE rates. If the GPRS/3G/EDGE settings are not pre-configured on your phone, contact your operator for the parameters. Do not change the settings as this may cause services to stop working.

#### **To add a new GPRS/3G/EDGE connection**

Before you begin, get the following information from your service provider:

- Access Point Name (APN)
- Your user name and password if needed.
- Server IP and the port number if the network uses a proxy server.

1. Press **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks** > **Network Settings** > **Access Point Names**.
2. Press **Menu Key** > **New APN**.
3. Touch **Name** to enter your APN name (You can name it as you like).
4. Touch **APN** to enter the APN you want to add.
5. Touch **Proxy** and **Port** to enter the Server IP and port if the network uses a proxy server.
6. Touch and enter **Username** and **Password** (If there is no User name and Password, leave them blank).
7. Touch and enter **APN type** if needed.
8. Press **Menu Key** > **Save** to complete.

#### **Notes:**

If you want to set the APN to default settings, press **Menu Key** > **Reset to default**.

## **Wi-Fi**

Wi-Fi provides wireless Internet access over distances of up to 300 feet (100 meters).

#### **To turn on Wi-Fi**

1. Press **Home Key** >  > **Settings** > **Wireless & networks**.
2. Select the **Wi-Fi** check box to turn Wi-Fi on.

#### **To add a Wi-Fi network**

1. Press **Home Key** >  > **Settings** > **Wireless & networks** > **Wi-Fi settings**.

The Wi-Fi network names and security settings (open network or secured network) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.

You can also press **Menu Key > Scan** to scan the Wi-Fi networks.

## 2. Touch a network to connect.

- If you select an open network, you will be automatically connected to the network.
- If you select a secured network, you will need to input the wireless password.

## Check the Wi-Fi network status

You can check the Wi-Fi network status from the notification bar and wireless controls.

1. Check the  icon in the notification bar.
2. Press **Home Key >  > Settings > Wireless & networks > Wi-Fi settings**, then touch the wireless network that the phone is currently connected to.

You can check the network status from the pop-up window.



# Using browser

You can use your Browser to browse most of the websites. Some web pages may not be displayed properly as some specific web page technologies, such as Flash, are not supported by the phone. Your phone will automatically create an EDGE or GPRS/3G connection for you while browsing web pages.

## How to open browser

Press **Home Key** >  > **Browser** to start this function.

## How to open web pages

In **Browser** you can open web pages through the following ways:

1. Touch the address bar to enter the website you want to browse, and touch **Go**.
2. Press **Menu Key** > **More** > **Bookmarks** and select an item to open.
3. Select an item from **Most visited** tab/**History** tab in Bookmarks Screen.

## Browsing options

When browsing web pages, you can do some operations.

1. Press **Menu Key** > **Refresh** to refresh the page.
2. Press **Menu Key** > **More** > **Find on page** and enter the search item to view the search result.
3. Press **Menu Key** > **More** > **Select text** and slide your finger on the page to select the text you want to copy.

Your phone automatically copies the selected text to the clipboard.

4. Press **Menu Key > More > Share page** to send the page by Email, Google Mail, Messages, or RoadSync Mail.
5. Press **Menu Key > More > Page info/Downloads** to view the page or download information.

**Note:** You can double-touch to zoom in, then double-touch again to zoom out. You can also pinch to zoom in or out.

You can rotate your phone sideways to view the landscape Browser Screen if you select the **Orientation** check box in **Home Key >  > Settings > Sound & display**.

### To open a new browser window

1. Press **Menu Key > New window** to open a new browser window.
2. Touch the address bar to enter the website you want to browse.

### To switch between different browser windows

If you have more than one browser window opened, you can switch between these windows.

1. Press **Menu Key > Windows** to view all the windows you opened.
2. Touch the page you want to browse.

### Tips:

You can also touch  next to the web page to close a window.

### Open links in web pages

1. Open a web page that contains a link.

2. Touch a link to open the page.

You can also hold on the link to open the shortcut menu:

- **Open:** Open the web page.
- **Open in new window:** Open the web page in a new window.
- **Bookmark link:** Save the link to your **Bookmarks**.
- **Save link:** Download the linked web page to your phone.
- **Share link:** Send the link by Email, Google Mail, Messages, or RoadSync Mail.
- **Copy link URL:** Copy the link to the clipboard.

### To download applications from web pages

1. Open a web page that contains an application link.
2. Touch the link or hold on the link and select **Save link** to download the application to your phone.

#### Notes:

Downloaded applications are saved in your memory card.

## Using bookmarks

You can save your frequently-used pages as bookmarks on your phone.

#### To add a new bookmark

1. Open a web page.
2. Press **Menu Key > Bookmarks**.
3. Touch **Add**.

4. Enter a name of the bookmark and touch **OK**.

Bookmarks will be sorted by the time with the latest one on the top.

### **To edit a bookmark**

1. Open a Browser window.
2. Press **Menu Key > More > Bookmarks**.
3. Select an item you want to edit and hold on it until the shortcut menu pops up.
4. Select **Edit bookmark**.
5. Edit the name or location, and then touch **OK** to save it.

### **To delete a bookmark**

1. Open a Browser window.
2. Press **Menu Key > More > Bookmarks**.
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark** and touch **OK** to confirm the deletion.

## **Browser settings**

You can set the Browser text size, home page etc. by pressing **Menu Key > More > Settings** from a browser window.

### **Page content settings**

- **Text size:** Adjust the browser text size.
- **Default zoom:** Set the browser default zoom.

- **Open pages in overview:** Select to show overview of newly opened pages.
- **Text encoding:** Select a text encoding type.
- **Block pop-up windows:** Select to block pop-up windows.
- **Load images:** Select to show the images of web pages.
- **Enable power save mode:** Select to reduce display power consumption by inverting webpage colors.
- **Auto-fit pages:** Select to format the web pages to fit the screen.
- **Enable JavaScript:** Select to enable JavaScript.
- **Enable plug-ins:** Select to enable plug-ins.
- **Open in background:** Select to open new windows behind the current one.
- **Set home page:** Select to edit the home page web site.

### **Privacy settings**

- **Clear cache:** Delete all the cached page contents.
- **Clear history:** Clear the browser navigation history.
- **Accept cookies:** Select to allow sites to save and read cookies.
- **Clear all cookie data:** Clear the browser cookies.
- **Remember form data:** Select to remember the data you type in forms for later use.
- **Clear form data:** Clear the saved form data.
- **Enable location:** Select to allow sites to request access to your location.

- **Clear location access:** Select to clear access for all websites.

### **Security settings**

- **Remember passwords:** Select to save usernames and passwords for web sites.
- **Clear passwords:** Clear the saved passwords.
- **Show security warnings:** Select to show warnings if there is a problem with a site's security.

### **Advanced settings**

- **Set search engine:** Select a search engine.
- **Website settings:** View advanced settings for individual websites.
- **Reset to default:** Clear all browser data and reset all settings to default.

# Bluetooth

Bluetooth is a short-range wireless communication technology. Phones with Bluetooth capabilities can exchange information within a distance of about 10 meters without any physical connection. The Bluetooth devices must be paired before the communication is performed.

## How to turn on/off bluetooth

1. Press **Home Key** >  > **Settings** > **Wireless & networks**.
2. Select the **Bluetooth** check box to turn Bluetooth on.

The  icon will be displayed in the notification bar. If you want to turn Bluetooth off, clear the **Bluetooth** check box.

### Notes:

By default Bluetooth is turned off. If you turn it on, and then turn off your device, Bluetooth is also turned off. When you turn on your device again, Bluetooth turns on automatically.

## How to make your device visible

Other devices with Bluetooth capabilities can detect your phone, establish a partnership, or use a Bluetooth service.

1. Press **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Select the **Bluetooth** check box if needed.
3. Select the **Discoverable** check box to make your device visible.

**Note:** Bluetooth visibility is turned off automatically after 2 minutes.

## How to change your device name

1. Press **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Select the **Bluetooth** check box if needed.
3. Touch **Device name**.
4. Enter the name and touch **OK**.

## How to pair with another bluetooth device

You can pair your device with another device that has Bluetooth capabilities. Once you do this, the two devices must have Bluetooth turned on but do not need to be visible for you to exchange information between them.

1. Press **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Touch **Scan for devices**.

Your Vodafone Smart Chat will display all reachable Bluetooth devices in the **Bluetooth devices** section.

3. Touch the device you want to pair with.
4. If necessary, type your PIN to pair and touch **OK**.

### Tips:

The same PIN should be entered on the other device.

# Experiencing multimedia

## Camera

Your phone comes with a 3-megapixel camera that lets you capture sharp pictures.

### How to open Camera

Press **Home Key** >  > **Camera** or hold **Camera Key** to open the camera.

**Notes:** You can switch from the camera to the camcorder quickly by dragging the  switch up.

### How to take pictures

Aim the camera at the subject and then touch  or press **Camera Key** to take the shot. You can touch  to adjust the brightness and touch  open the zoom list to zoom in or out before taking pictures.



- Touch the picture in the top right corner of your Camera Screen to view the picture just captured.
- Press **Menu Key > Gallery** to view all of your pictures.

## Camera settings

By pressing    from the Camera Screen, you can adjust the camera settings.

### Camera settings

- **Exposure:** Touch to adjust the exposure.
- **Picture size:** Touch to select the size of your captured pictures.
- **Picture quality:** Touch to adjust the jpeg quality.
- **Color effect:** Touch to select the picture effect.
- **Select ISO:** Touch to set the ISO level or set it back to Auto. Higher ISO numbers are better for taking pictures in low light conditions.
- **Anti Banding:** Select to adjust preview images automatically or for specified AC frequencies, in order to avoid striate previews caused by interference.
- **Saturation:** Touch to adjust the saturation.
- **Contrast:** Touch to adjust the contrast. Higher contrast ratio enables you to easily see the sharp colors of blue, red or green against any black color.
- **Sharpness:** Touch to adjust the sharpness.

- **Camera settings:** Restore the camera settings to default.
- **Store location:** Select to record location in picture data.
- **White balance:** Touch to adjust the white balance. White balance enables the camera to capture colors more accurately by adjusting to the current lighting environment.

## Camcorder

Camcorder enables you to shoot video clips.

### How to open Camcorder

Touch  > **Camcorder** to open the camcorder.

#### Notes:

You can switch from the camcorder to the camera quickly by dragging the  switch down.

### How to shoot videos

1. Touch  or press **Camera Key** to start shooting.
2. Touch  or press **Camera Key** to stop shooting.

#### Notes:

Touch the picture in the top right corner of your Camcorder Screen to view the video clip just shot.

### Video settings

By pressing    from the Camcorder Screen, you can adjust the video settings.

## **Camcorder settings**

- **Color effect:** Touch to select the video effect.
- **Video quality:** Select the video quality type (CIF: 352×288, QVGA: 320×240, QCIF: 176×144).
- **Video Encoder:** Select the video encoder type.
- **Audio Encoder:** Select the audio encoder type.
- **Video duration:** Touch to set the video duration.
- **Restore settings:** Restore the camcorder settings to default.
- **White balance:** Touch to adjust the white balance. White balance enables the video to capture colors more accurately by adjusting to the current lighting environment.
- **Video quality:** Touch to adjust the video quality.

## **FM Radio**

With the FM Radio, you can search for radio channels, listen to them, and save them on your device. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area. The wired headset works as an antenna, so always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will be turned off.

### **How to open FM Radio**

You need to insert a headset to your phone before opening the FM radio.

Touch  > **FM Radio** to open the FM radio.


After opening the FM radio, you will see the  icon in the notification bar.

## How to listen to FM Radio

1. Press **Menu Key** > **Scanning for all FM Stations** to scan for channels automatically.



2. Press **Menu Key** > **Select Regional Band** to select the regional of band .

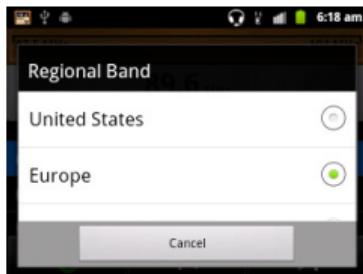

3. Press **Volume Keys** to adjust the volume.
4. Press **Menu Key** > **Sleep** to set the FM radio sleep timer.

5. Press **Menu Key > Enable Speaker** to switch to loudspeaker or headset.
6. Touch  to turn off the FM radio.

## Music

You can play digital audio files from your phone's memory card in Music.


### How to open Music

You need to copy the audio files you want to play to your memory card first.

1. Touch  > **Music** to open Music Screen.
2. Select a file to open.

### How to play Music

1. Touch Artists/Albums/Songs/Playlists to get the songs you want to play.
2. Touch a song from the list to start playing.

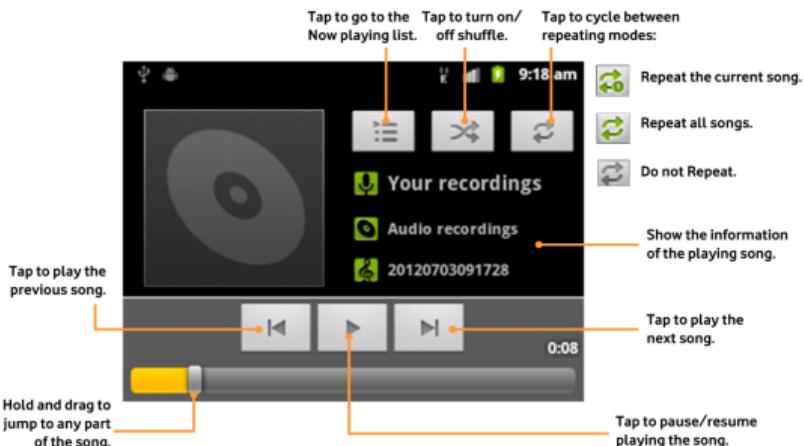

## Notes:

Press **Volume Keys** to adjust the volume.

## How to create playlists

You can create some playlists to organize your music files.

1. Select a music file you want to add to a new playlist.
2. Touch and hold on the file until a shortcut menu pops up.
3. Touch **Add to playlist**.
4. Touch **New**.
5. Enter the playlist name and touch **Save**.

The playlist is created and the file you selected is added to the playlist.

## **Managing Your playlists**

1. Touch **Playlist** from the Music Screen to view all playlists.
2. Hold on the playlist you want to play or edit until a shortcut menu pops up.
  - i Touch **Play** to play the playlist.
  - ii Touch **Delete** to delete the playlist.
  - iii Touch **Rename** to edit the playlist name.

### **To add songs to your playlist**

1. Open the folder where the song you want to add to a playlist is.
2. Hold on the song until a shortcut menu pops up.
3. Select **Add to playlist**.
4. Select a playlist from the list.

## **How to set a song as Ringtone**

1. Open the folder where the song you want to set as ringtone is.
2. Hold on the song until a shortcut menu pops up.
3. Select **Use as phone ringtone**.

### **Tips:**

You can also set a song as ringtone when you are playing it by pressing **Menu Key > Use as ringtone**.

## **Videos**

You can use **Videos** to play your video files.

## How to open Videos


Press **Home Key >**   **> Videos** to open the video player.

Your phone will show you all video files saved on your memory card.

## How to play Videos


Copy the video file to your memory card before playing it.

1. Touch the video file you want to play from the Videos Screen.
2. Touch on the screen to show the control bar.

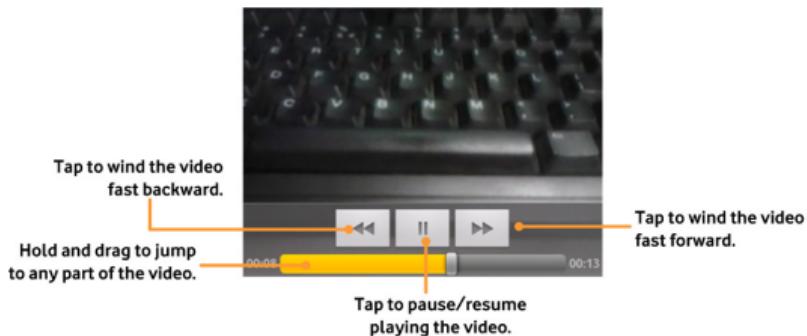


## Gallery

**Gallery** helps you view pictures. For pictures, you can also do some basic editing tasks. For instance, set them as your wallpaper or contact icon, and share with your friends.

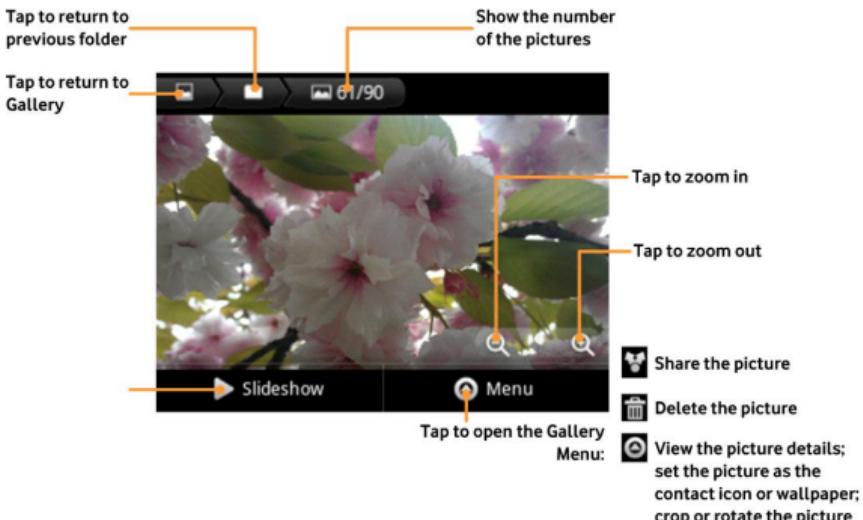

When viewing a picture, you can double-touch to zoom in, then double-touch again to zoom out. You can also pinch to zoom in or out.

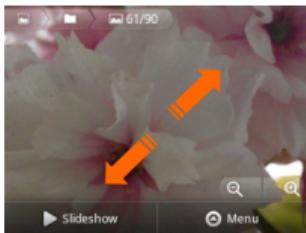

# Sound Recorder

**Sound Recorder** enables you to record your voice memos that you can set as ringtone.

## How to open Sound Recorder

Press **Home Key** >  > **Sound Recorder** to open the sound recorder.

### Notes:

You need to install a memory card to use Sound Recorder.

## How to record your memos

1. Get the microphone near to your mouth.
2. Touch  to start recording.
3. Touch  to stop recording.
4. Touch  to play back the voice recording.
5. Touch **OK** to save the voice recording, or touch **Discard** to discard the recording.

### Notes:

You can find your recordings in **Home Key** >  > **Music** > **Playlists** > **My recordings**. If you want to set a recording as ringtone, hold the recording and select **Use as phone ringtone** from the pop-up shortcut menu.

# Google applications

## Signing In to your google account

Signing in to your Google Account enables you to synchronise Google Mail, Calendar, and contacts between your phone and the web.

1. Touch a Google application, such as **Talk**.
2. Read the instructions and touch **Next**.
3. Touch **Sign in** if you have a Google account. Enter your user name and password, and then touch **Sign in**.  
Touch **Create** if you do not have a Google account.

## Using Google Calendar

Touch **Home Key** >  > **Calendar** to use Google Calendar, Google's time management application. You can use the calendar to schedule appointments, including meetings and other events. Your appointments will be displayed on the screen as scheduled. All your appointments are synchronised to your Google account, which enables you to share your schedule, get your entire calendar on the go, and receive Email reminders for your upcoming events.

## Using Google Mail

Google Mail is Google's web-based email service. Google Mail is configured when you sign in to your Google account. Depending on

your synchronization settings, Google Mail on your phone is automatically synchronised with your Google Mail account on the web.

## **How to open Google Mail**

Touch  > Google Mail.

## **How to create and send an email**

1. In the Inbox, press **Menu Key** and then touch **Compose**.
2. Enter the message recipient's email address in the To field. If you are sending the email to several recipients, separate the email addresses with a comma. You can add as many message recipients as you want.
3. Enter the email subject, and then compose your email.
4. After composing your email, touch **Send**.

## **Using Google Talk**

Google Talk is Google's instant Messages program, which enables you to communicate with other people that also use Google Talk.

## **How to open Google Talk**

Touch  > Talk.

## **How to add a new friend**

You can only add people who have a Google Account.

1. In the Friends list, press **Menu Key > Add friend**.
2. Enter the Google Talk instant Messages ID or Google email address of the friend you want to add.

## **How to view and accept an invitation**

1. In the Friends list, press **Menu Key > Invites**.  
All chat invitations you have sent or received are listed on the pending invitations screen.
2. Touch a pending invitation, and then touch **Accept** or **Decline**.

## **How to change your online status**

1. Touch the online status icon beside your status message, and then select the status you want on the menu.
2. Touch the status message box and then enter your status message using the onscreen keyboard.

## **How to start a chat**

1. Touch a friend in the Friends list.
2. Chat with your friend by entering text using the on-screen keyboard.
3. After entering your message, touch **Send**.

# Phone settings

## Basic settings

### How to set the time and date

1. Press **Home Key > Menu Key > Settings > Date & time.**
2. Clear the **Automatic** check box if you want to set time and date by yourself.
3. Configure the time and date settings:
  - Touch **Set date**. Adjust the date, and touch **Set** to save it.
  - Touch **Select time zone** and touch the area where you are.
  - Touch **Set time**. Adjust the time, and touch **Set** to save it.
  - Touch the check box beside **Use 24-hour format** to change the time format.
  - Touch **Select date format** and select the type you like.

## Display settings

By pressing **Home Key > Menu Key > Settings > Display**, you can configure the display settings, such as orientation, animation, brightness, and screen timeout.

### To adjust the screen brightness

1. Select **Brightness** from the Display settings.
2. Adjust the brightness and touch **OK**.

### **To adjust the delay before the screen turns off**

1. Touch **Screen timeout** from the Display settings.
2. Select the time from the list.

### **To show animation when opening/closing windows**

You can select to show an animation when opening or closing windows.

1. Touch **Animation** in the Display settings.
2. Select the animation type you'd like to use.

If you want to disable this function, select **No animations**.

## **Sound settings**

By pressing **Home Key > Menu Key > Settings > Sound**, you can configure the sound settings, such as ringtones and notifications.

### **To switch your phone to silent mode**

Select the **Silent mode** check box from the Sound settings.

### **To switch your phone to vibration mode**

Select the **Phone vibrate** check box from the Sound settings.

If you switch your phone to silent mode with vibration, the vibration icon  will appear in the notification bar.

### **To adjust the volume**

If you want to set the volume, make sure your phone is not in silent mode.

1. Select **volume** from the Sound settings.

2. Adjust the ringtone/Media volume and touch **OK** to save.

#### **Tips:**

You can adjust the ringtone volume quickly by pressing **Volume Keys** from any screen.

#### **Notes:**

If you want to adjust the notification volume together with ringtone volume, select the **Use incoming call volume for notifications** check box.

#### **To set the ringtone**

1. Touch **Phone ringtone** from Sound settings.
2. Select the ringtone you want to use from the pop-up list and touch **OK**.

#### **Tips:**

You can also set an audio file as the ringtone while browsing the music list.

1. Open the songs list by pressing **Home Key** >  > **Music** > **Songs**.
2. Hold the song you like until the shortcut menu pops up.
3. Select **Use as phone ringtone**.

#### **To set the default notification ringtone**

1. Select **Notification ringtone** from the Sound settings.
2. Scroll the ringtone list and select one to set as the default notification ringtone.

3. Touch **OK** to save.

### **To enable the touch tones**

You can set your phone to play tones when using dial pad.

Select the **Audible touch tones** check box from the Sound settings.

### **To enable the screen selection tones**

You can set your phone to play sound while making a selection by touching the screen.

Select the **Audible selection** check box from the Sound settings.

### **To enable the screen lock sounds**

You can set your phone to play sound when locking and unlocking the screen.

Select the **Screen lock sounds** check box from the Sound settings.

### **To enable the haptic feedback**

You can get the vibration feedback while pressing the soft keys and on certain UI interfaces if you have enabled haptic feedback.

1. Press **Home Key** >  > **Settings** > **Sound**.

2. Select the **Haptic feedback** check box.

## **Language settings**

You can change the system language of your phone.

### **To change the language of your operating system**

1. Touch  > **Settings** > **Language & keyboard** > **Select language**.

2. Select a language from the list to set it as the system language.

## Mobile network services

The GSM and WCDMA services are supported by your phone. You can configure the network settings according to your phone service.

### To enable data roaming

1. Touch  > **Settings** > **Wireless & networks** > **Mobile networks**.
2. Select the **Data roaming** check box to enable data roaming.

### To switch the network mode

1. Touch  > **Settings** > **Wireless & networks** > **Mobile networks** > **Mobile settings** > **Network Mode**.
2. Select **GSM/WCDMA auto**, **WCDMA only**, or **GSM only** to switch the network mode.

### To switch the network operators

1. Touch  > **Settings** > **Wireless & networks** > **Mobile networks** > **Mobile settings** > **Network operators**.
2. Touch **Search networks** to set the network operator manually, or touch **Select automatically** to set the network operator automatically.

### To set the Access Point Names

You can use the default Access Point Names (APN) to connect to the internet. If you want to add a new APN, please contact your network operator to get detailed information.

1. Press **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks** > **Mobile settings** > **Access Point Names**.
2. Press **Menu Key** > **New APN**.
3. Set the necessary parameters (see *Getting Connected- Connecting to the Internet- GPRS/3G/EDGE- To add a new GPRS/3G/EDGE connection* on page 56.)
4. Press **Menu Key** > **Save**.

## Security settings


You can protect your device and SIM card from unauthorized use.

### Protecting your phone with a screen lock

#### To set the screen unlock pattern

You can protect your phone from unauthorized use by creating a personal screen unlock pattern.

1. Touch  > **Settings** > **Location & security** > **Set up screen lock** > **pattern**.
2. Draw your own pattern and touch **Continue**.

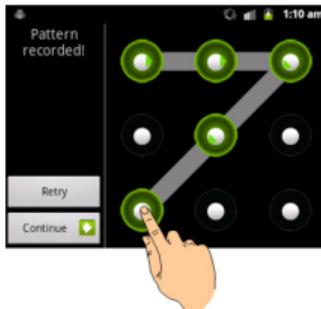

3. Draw the pattern again and touch **Confirm**.

### To lock the screen


Press **Power Key** to lock the screen.

### To unlock the screen with a pattern

1. Press **Power Key**.
2. Draw the pattern you set to unlock the screen.



If you make a mistake, your phone will ask you to try again.

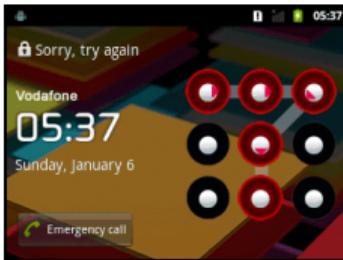

## **Protecting your SIM card with a PIN**

You can set the PIN password to prevent others from using the SIM function. The initial PIN code is provided by your service operator.

### **To enable SIM PIN**

1. Touch  > **Settings** > **Location & security** > **Set up SIM card lock**.
2. Select the **Lock SIM card** check box.
3. Enter the PIN and touch **OK**.

### **To change SIM PIN**

Before changing SIM PIN, you need to enable it.

1. Press **Home Key** >  > **Settings** > **Location & security** > **Set up SIM card lock**.
2. Touch **Change SIM PIN**.
3. Enter the PIN and touch **OK**.
4. Enter a new PIN and touch **OK**.
5. Reenter the new PIN and touch **OK**.

## **Setting up credential storage**

You can select to allow applications to access secure certificates and other credentials.

### **To enable secure credentials**

1. Press **Home Key** >  > **Settings** > **Location & security**.
2. Touch **Set password** to create a password.

### **Tips:**

You can also install encrypted certificates from memory card by touching **Install from SD card**.

3. Select the **Use secure credentials** check box.

### **To delete credentials**

1. Touch  > **Settings** > **Location & security**.
2. Touch **Clear storage** to clear credentials.

## Managing memory

### **Managing your memory card**

#### **To view the space information**

Press **Home Key** >  > **Settings** > **Storage**.

You can view the space information from the **Total space/Available space in SD card** section.

#### **To unmount your memory card**

1. Press **Home Key** >  > **Settings** > **Storage**.
2. Touch **Unmount SD card**.

The  icon will appear in the notification bar.

#### **To erase your memory card**

1. Unmount your memory card.
2. Touch **Erase SD card**.
3. Touch **Erase SD card** to confirm.

If you have set an unlock pattern, you will be asked to draw it on your screen.

#### 4. Touch **Erase everything**.

## **Managing internal phone storage**

**To see how much storage space is available**

Press **Home Key** >  > **Settings** > **Storage**.

View the **Available space** in the **Internal storage** section.

### **Managing internal storage**

Your phone has an internal memory storage allocation of 512Mbytes theoretically, but most used for system file, you can use only between 120 and 130Mbytes for yourself, you can view the **Available space** to query it.

Managing the internal storage is very necessary. You can clean or manage the user memory by following methods:

- Applications update may have an impact on the phone memory, update selectively for memory saving.
- Some applications can be installed on the SD card but not all.
- Uninstall the applications in your phone memory.

### **Moving an application**

You can move applications downloaded or installed on your phone to the microSD card. You can also move applications to your phone if the microSD card is getting full.

**NOTE:** Not all applications can be moved to your phone or microSD card.

1. Press **Home Key** >  **> Settings > Applications > Manage applications.**
2. Touch the application you want to move below the **Downloaded** tab.
3. Touch **Move to phone** or **Move to SD card**.

### **Uninstalling an application**

You can uninstall applications installed on your phone.

1. Press **Home Key** >  **> Settings > Applications > Manage applications.**
2. Touch the application you want to uninstall under the **Downloaded** tab.
3. Touch **Uninstall**.

### **How to reset to factory settings**

1. Press **Home Key** >  **> Settings > Privacy.**
2. Touch **Factory data reset**.
3. Touch **Reset phone**.

If you have set an unlock pattern, you will be asked to draw it on your screen.

4. Touch **Erase everything**.

### **How to reduce power consumption**

If you reduce power consumption you can make your battery last longer. There are many ways to reduce it – for example:

1. Reduce the LCD brightness;
2. Use only 2G networks, as this uses much less battery power (but data is much slower):
  - Press **Home Key** >  > **Settings** > **Wireless & networks** > **Network settings** > **Network Mode**.
  - Select the **GSM only** to switch the network mode.
3. Sleep mode puts your device into a low-power-consumption state while the display is off, to save battery power. Your device also goes into Sleep mode automatically when you leave it idle after a certain period of time.
4. Cancel the Always-On Data Services. When you enable this option, more data traffic will be generated for automatic updates of applications data, and also means your phone will consume more power.
  - Touch **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks**.
  - Cancel the **Enable always-on mobile data** box to stop applications from uploading data automatically.
5. Reduce the number of widgets on your Home screen.

# Application settings

## Managing applications

You can view and manage the applications installed in your phone.

### To view the applications installed in your phone

Press **Home Key** >  > **Settings** > **Applications** > **Manage applications**.

Your phone will show you the applications in a list.

### To allow the installation of non-Market applications

1. Press **Home Key** >  > **Settings** > **Applications**.
2. Select the **Unknown sources** check box.

### To install an application

You can install an application from the Play Store by selecting the item you want to download and touch **Install**.

You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your phone and processor type before installing it.

1. Press **Home Key** >  > **Filer**, and open the folder where the application you want to install is.
2. Touch the application to start installation.
3. Read the installation instructions that come with the application and follow it to complete the setup.

### To remove an application

You can uninstall any application that you have downloaded and installed from Play Store.

1. On the Market Downloads screen, touch the application you want to uninstall, then touch **Uninstall**.
2. When prompted, touch **OK** to remove the application on your phone.
3. Choose the reason for removing the application, then touch **OK**.

#### **Uninstall third-party applications**

1. Press **Home Key** >  > **Settings** > **Applications** > **Manage applications**.
2. Touch on the application you want to remove.
3. Touch **Uninstall**, and touch **OK** to confirm.

# Other applications

## Alarm

### How to set alarms

1. Press **Home Key** >  > **Alarm**.
2. Touch the default alarm set to configure it or touch  to create a new alarm.
3. Select the **Alarm** check box and edit the items needed, such as Name, Time, Repeat, Snooze, Duration, Vibrate, Ringtone, Volume, Volume crescendo, and Delay.

## Calculator

### Open Calculator

Touch  > **Calculator**.

### Tips:

Press **Menu Key** > **Advanced panel** to use scientific calculation.

## Note pad

Note pad is used to take down some memos.

## SIM Toolkit

SIM Toolkit appears on the screen only if your SIM card provides this function. To use the SIM card services, insert your SIM card into the phone first.

Press **Home Key** >  > **SIM Toolkit**.

## Task Manager

You can use **Task Manager** to view and stop running applications.

## Google+ service

Google+ makes connecting on the web more like connecting in the real world. Share your thoughts, links and photos with the right circles. Get everyone on the same page with fast and simple group chat.

This software is not default installed in Smart Chat. When you want to use it first, you must install it from SD card:

1. Make sure you have installed the microSD card on your phone.
2. Press **Home Key** >  > **File Manager**, and find the .apk file about google+ at the directory of **/sdcard/google+**.
3. Touch the file to start installation.
4. Read the installation instructions that come with the application and follow it to complete the setup.

## The open source code service

For this product's supporting open source code service, please read it on your phone:

On the Home screen, press the **Menu key > Settings > About phone > Legal information.**

Also you can visit the website below:

<http://support.zte.com.cn/support/news/NewsDetail.aspx?newsId=1002222>

## Specifications

Dimension		Approx. 114mm x 65mm x 10.9 mm
Weight		200g (with battery)
Bearer		GSM/WCDMA support
Main Display dimension, resolution		2.6 inches QVGA
<b>Back Camera</b>	Sensor Type	CMOS
	Still Image Capture Resolution (in MP)	3 mega pixel
Total internal memory		512MB
Removable memory card		Support microSD card
Maximum Capacity of memory card		32GB
<b>Battery</b>	Capacity	1100mAh
	Standby time	Approx. 180 h (subject to network status)
	Voice talk time	Approx. 260 min (subject to network status)
WAP browser version		WAP2.0

# For Your Safety

## Distraction

### Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

## Product Handling

### General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.

- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum –10 and maximum +60 degrees Celsius.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

## **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

## **Demagnetization**

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a long time.

## **Electrostatic Discharge (ESD)**


Do not touch the SIM card's metal connectors.

## **Power Supply**

Do not connect your device to the power supply or switch it on until instructed to do so in the installation instructions.


## **Antenna**

Do not touch the antenna unnecessarily.

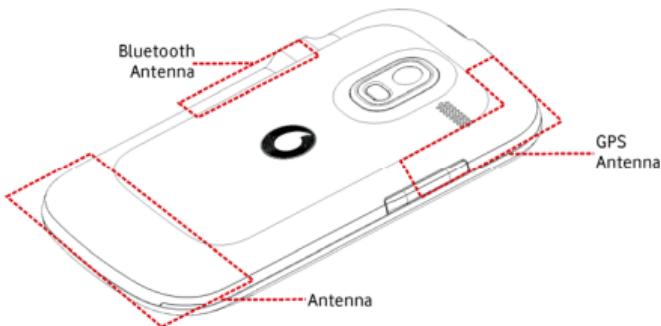

## **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.

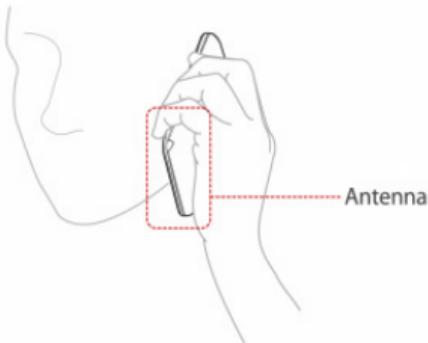

## Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

## Seizures/ Blackouts

This phone is capable of producing bright flashing lights.

## Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.

- Take lots of breaks to stretch and relax.

## **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone is capable of producing loud noises which may damage your hearing.

## **MP3 and Video Player Function**

When listening to pre-recorded music or watching videos on your device, with headphones or earphones at high volumes, you run the risk of permanent damage to your hearing. Even if you are used to listening to music at a high volume and it seems acceptable to you, you still risk damaging your hearing. Reduce the sound volume to a reasonable level and avoid using headphones for an excessive period of time to avoid hearing damage.

Different headphones, earphones or ear buds may deliver a higher or lower volume, at the same volume setting on your device. Always start at a low volume setting.

Do not listen to music or video with headphones while driving.

## **Bright Light**

This phone is capable of producing flash of light or use as a torch, do not use it too close to the eyes.

## **Phone Heating**

Your phone may become warm during charging and during normal use.



## **Phone Acoustic**

To prevent possible hearing damage, do not listen at high volume levels for long periods.

## **Electrical Safety**

### **Accessories**

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

### **Connection to a Car**

Seek professional advice when connecting a phone interface to the vehicle electrical system.

### **Faulty and Damaged Products**

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

## Battery Handling & Safety

Always switch the device off and disconnect the charger before removing the battery.

Only use the battery and charger supplied, or manufacturer approved replacements intended for use with your phone. Using other batteries and chargers could be dangerous.

Do not disassemble or short-circuit the battery. Accidental short-circuiting can occur if a metallic object such as a key, paper clip, or pen touches the terminals of the battery.

Improper battery use may result in a fire, explosion, or other hazard. If you believe the battery has been damaged, do not use it, take it to a service centre for testing.

## Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

## Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To

achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

## **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

## **Medical Devices**

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

## **Hospitals**

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

## **Interference in Cars**

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Petrol Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

Turn off your mobile phone or wireless device when in a blasting area or in areas posted turn off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

# Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as formal declaration that the Vodafone Smart Chat manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBBs)
6. Polybrominated diphenyl ethers (PBDEs)

(Compliance is evidenced by written declaration from our suppliers, assuring that any potential trace contamination levels of the substances listed above are below the maximum level set by EU 2002/95/EC, or are exempt due to their application.)

The Vodafone Smart Chat manufactured by ZTE CORPORATION, meets the requirements of EU 2002/95/EC.

# Disposal of Your Old Appliance



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's Recycling Manual based on WEEE directive, please send an e-mail to [weee@zte.com.cn](mailto:weee@zte.com.cn), or visit the website below to download the document:

<http://ensupport.zte.com.cn>

# EC DECLARATION OF CONFORMITY

It is hereby declared that following design:



Product Type: WCDMA/GSM(GPRS) Dual-Mode Digital Mobile Phone

---

Model No: ZTE P752D/Vodafone Smart Chat

---

**Complies with** the essential protection requirements of the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC).

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) was performed by PHOENIX TESTLAB (Notified Body No.0700), based on the following standards:

Safety	EN 60950-1:2006+A11:2009; EN 50332-1:2000; EN 50332-2:2003
EMC	EN 301489-1V1.9.2/-3 V1.4.1/-7 V1.3.1/-17V2.1.1/-24V1.5.1; EN 301489-34 V1.1.1

Radio	EN 301 511 V9.0.2; EN 300 328 V1.7.1; EN 301 908-1/-2 V5.2.1; EN 300 440-1 V1.6.1/-2 V1.4.1
Health	EN 50360:2001/AC:2006; EN 62209-1:2006; EN 62311:2008; EN 62209-2:2010; EN 62479:2010

This declaration is the responsibility of the manufacturer:

ZTE CORPORATION

---

ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park,  
Nanshan District, Shenzhen, Guangdong, 518057, P.R.China

---

Authorised person signing for the company:

Xu Feng              Quality Director Of ZTE Corporation

---

*Name in block letters & position in the company*

Shenzhen, 23th July 2012

*Place & date*

*Legally valid signature*



Some services and apps may not be available in all countries.  
Please ask in-store for details.

Facebook is a trademark of Facebook, Inc. The Twitter marks are trademarks of Twitter, Inc. Google, Google Play, Android, YouTube and other marks are trademarks of Google Inc. © 2012 Gameloft. All Rights Reserved. Shazam is a trademark of Shazam Entertainment Limited. Foursquare and the Foursquare logos are the trademarks of Foursquare Labs Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution Licence.

© Vodafone Group 2012. Vodafone and the Vodafone logos are trade marks of Vodafone Group. Any product or company names mentioned herein may be the trade marks of their respective owners.